


RS MIZAR™

Diamond Detective

DYMOND Inc.

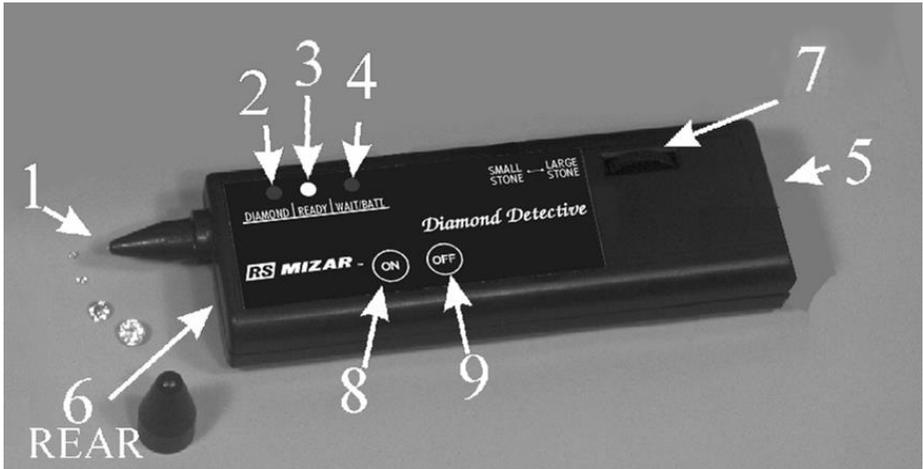

Congratulations on your purchase of the Diamond Detective.

IDENTIFICATION OF PARTS

1. Probe
2. Diamond Indicator
3. Ready Lamp
4. Wait/Low Battery Lamp
5. Battery Compartment
6. Conductive Panel
7. Small/Large Stone Switch
8. "ON" Button
9. "OFF" Button

*PRIOR TO TESTING, IT IS RECOMMENDED THAT THE TIP OF THE PROBE BE CLEANED BY GENTLY WIPING ACROSS A CLEAN SHEET OF PAPER *

OPERATIONAL CHECKOUT

1. Rotate the Thumbwheel (7) to the right for large stones.
2. Press the "ON" button (8).
3. The Wait Lamp (4) will be lit.
4. All other display lamps will remain extinguished for the wait period which is typically less than nine seconds at room temperature. The time can increase with low temperatures or a weak battery. After the wait period there is a single beep.
5. If the waiting time exceeds twenty seconds or the Wait Lamp fails to extinguish replace the battery.
6. The Diamond Tester is ready to use after the Wait Lamp extinguishes and the Ready Lamp is lit.
7. When testing is completed always press the "OFF" button. Always turn off the unit immediately after testing to increase battery life.

AUTOMATIC ALARM

The Diamond Tester will sound alarm after 150 seconds of inactivity. Whenever the "On" button is pressed the timer resets to 150 seconds. If the unit alarm sounds before you have completed your test simply press the on button and continue your testing. Always press the "OFF" button after testing to prolong battery life.

MAINTENANCE

- Always place the protective cover over the probe immediately after use. Probe tip damage is not covered in the warranty.
- The only maintenance required is: (1.) cleaning the probe tip and (2) battery replacement.

SPECIFICATIONS

MODEL	DIAMOND DETECTIVE
POWER SOURCE	9 VOLT BATTERY NEDA SIZE 1604 (006P)
NET WEIGHT	105 GRAMS 3.7 OZ.

WARRANTY

Dymond Inc, provides that each Diamond Detective will be free from defects in material and workmanship for a period of two years from the date of purchase. (Batteries and Probe Tip are not included in Warranty.) This warranty becomes void by:

1. Unauthorized repair, misuse, modification, alteration, tampering or breaking any factory seal.
2. Accidental damage, neglect or improper use.

Dymond Inc, shall not be held legally liable or responsible for any error in display indication or the interpretation thereof in the identification of any stones, minerals, gems or gemstones by the Diamond Detective.

WARRANTY SERVICE

Should the Diamond Detective require warranty service write or call Dymond Inc, for a return material authorization (RMA). Be prepared to provide proof of purchase. Pack the Diamond Detective securely along with a description of the malfunction or problem and return unit freight pre-paid to the address below. Include along with the unit a copy of your dated purchase receipt. E.O.E.

Dymond Inc.
3307 Industrial 25th Street
Fort Pierce, FL 34946
Phone (772) 429-0045 Fax (772) 429-0170

INTERPRETING THE INDICATION



METAL ALERT	The sounding of a continuous “beep” indicates that the probe tip is in contact with either users hand or the metal setting. The remedy is to reposition the probe tip as described under “Diamond testing” section [5,6].
DIAMOND SIMULANTS	When testing Cubic Zirconium’s, “paste”, strass and other diamond simulants no illumination of the green diamond lamp will be observed.
DIAMONDS	Testing of a genuine diamond will cause the green diamond lamp to flash and a discontinuous beeping (beep-beep-beep) will sound.

PREPARATION PRIOR TO TESTING A STONE

- The presence of dust, dirt, film and moisture on a stone may produce an inaccurate indication. Therefore, it is prudent to routinely clean the surface of each stone to be tested by using a damp soft clean fabric followed by drying using a dry soft clean fabric.
- Remove the protective cover from the probe.
- The tip of the probe should be cleaned frequently by wiping the tip across the surface of a piece of bonded paper or a business card. Copier paper and fax paper are to be avoided.
- The tip of the probe may be damaged by an accidental dropping of the unit. Always place the protective cover over the probe immediately after use. Probe tip damage is exempted from the warranty.
- During testing the users hands should be clean and dry. Do not wear gloves. One of the User’s “bare” fingers must be touching the rear metal plate.
- The stone to be tested should be allowed to reach room temperature.
- For maximum accuracy, minimize handling of the stone prior to testing. If the item to be tested consists of a setting containing many stones requiring more than ten seconds to test user must avoid heating the setting with his hand; allow the item to be untouched for about fifteen seconds.
- Best results are obtained by performing tests in still air. Avoid fans, drafts or air movement from air conditioning or heating sources. Avoid breathing directly on the probe tip while testing.

“DIAMOND TESTING”

1. Choose either:
 - (A) the **LARGE** (normal) stone position when testing stones .08 Carat or larger (move the **LARGE/SMALL STONE** switch to the right).
 - (B) the **SMALL** stone position when testing stones .08 Carat or smaller (move the **LARGE/SMALL STONE** switch to the left).
2. The ambient temperature should be between 65°F and 95°F for testing.
3. Hold the diamond tester in your hand so that your fingers are in contact with the conductive panel (6).
4. With the other hand hold the stone to be tested by its setting.
5. Guide the probe tip to the center of a facet on the stone.
6. Touch the probe tip to the stone so that the probe tip is firmly and squarely against the facet of the stone. Excessive force which might bend or break the tip must be avoided.
7. If a diamond is being indicated the green lamp will flash and a beeping sound (“beep, beep, beep”) will be heard.
8. As always some stones require further testing to determine what they are. In the case of some Moissanite stones testing as Diamond you need to do further testing such as checking for Double Refraction, and shining UV light source on the stone while testing.

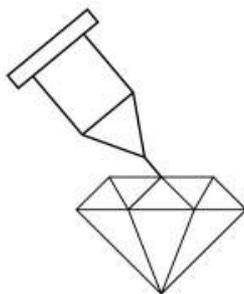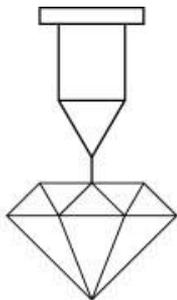

Firm Pressure
Required

CORRECT

WRONG

HELPFUL HINTS

- If the red Low Battery lamp remains on and the Ready Lamp doesn't light within twenty seconds the battery must be replaced.
- Stones being worn, which may be well above room temperature can be tested immediately using the **SMALL STONE** setting. Otherwise allow the stone to return to room temperature before testing.
- When testing a small stone use the **SMALL STONE** setting and make good contact against the stone on the first test attempt, otherwise allow the stone to return to room temperature before retesting.